

IMPORTANT SAFETY INSTRUCTIONS

- | | |
|-----------------------------|---|
| Read Instructions: | <i>All these safety and operating instructions should be read before the Sega Saturn is operated.</i> |
| Retain Instructions: | <i>The safety and operating instructions should be retained for future reference.</i> |
| Read Warnings: | <i>All warnings on the product and in this instruction manual should be adhered to.</i> |
| Follow Instructions: | <i>All operating and use instructions should be followed.</i> |

Power Sources: The Sega Saturn should only be operated with the type of power source (AC 120V, 60Hz) indicated on the label on the rear panel of the Sega Saturn. If you are not sure of the type of power supply to your home, consult your local power company. Using incorrect voltage can result in a risk of electric shock, fire or damage to the unit.

Overloading: Do not overload wall outlets, extension cords or multiple extension cord outlets as this can result in fire or electric shock.

Disconnect the Power: Unplug the Power Cord when connecting or disconnecting the Sega Saturn, and make sure that the television and VCR connected to the Sega Saturn are also switched off. If you do not, it may cause electric shock.

Power Cord: Keep the Power Cord and all plugs out of the reach of children. If children reach these parts or place them in their mouths, it can cause electric shock.

Power-cord Protection: The Power Cord should be routed so as to avoid being walked on or pinched by items placed on or against it. Pay particular attention to the area near the plug, outlet or receptacle, and the point where the Power Cord enters the Sega Saturn. A frayed, perforated or stripped cord can result in electric shock or fire.

Grounding or Polarization: The Sega Saturn is equipped with a polarized alternating current plug (a plug having one blade wider than the other). This plug fits into the outlet only one way as a safety feature. If you cannot insert the plug fully into the outlet, try reversing the plug. If the plug still does not fit, consult an electrician. Do not defeat the purpose of the safety function of the polarized plug by forcing it into the outlet, as this will result in a risk of electric shock.

Cleaning: Unplug the Sega Saturn from the wall socket before cleaning to avoid electric shocks or damaging the unit. Do not use liquid cleaners or aerosol cleaners. Use a moist cloth for cleaning.

Heat: The Sega Saturn should not be situated near sources of heat such as radiators, heat registers, stoves or other products (including amplifiers) that produce heat. Failure to comply with this can result in a risk of fire, electric shock or damage to the unit.

Water and Moisture: Do not use the Sega Saturn near water, for example, near a bath tub, wash bowl, kitchen sink, washing machine or swimming pool or in a wet basement and the like. If you do, it may cause electric shock or damage the unit.

Dust and Smoke: Avoid areas with a high incidence of dust, smoke or steam. Placing the Sega Saturn in such locations can cause electric shock or fire.

Object and Liquid Safety: Never push objects of any kind into the console through openings, as they may touch dangerous voltage points or short out parts that could result in fire, electric shock or damage to the unit. Never spill liquids of any kind on or in the Sega Saturn.

Ventilation: Slots and openings in the console are provided for ventilation to ensure reliable operation and to protect the Sega Saturn from overheating. These openings must not be blocked or covered. The Sega Saturn should not be placed in a built-in installation, such as a bookcase or rack unless proper ventilation is provided. Failure to comply with this can result in electric shock, fire or damage to the unit.



Placement: Do not place the Sega Saturn on an unstable surface. If it may fall, causing serious injury to a child or an adult and serious damage to the console. If the Sega Saturn is placed on a moveable surface (such as a cart), be careful to avoid quick stops and excessive force as it may cause the unit to overturn.

Attachments: Attachments not recommended by Sega may cause hazards and should not be used. Failure to comply with this can result in a risk of electric shock or damage to the unit.

Damage Requiring Service: Unplug the Sega Saturn from the wall socket and refer servicing to qualified personnel under the following conditions:

- (a) If the Power Cord or plug is damaged.
- (b) If liquid has been spilled or objects have fallen into the console.
- (c) If the Sega Saturn has been exposed to rain or water.
- (d) If the Sega Saturn does not operate normally despite following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
- (e) If the unit has been dropped or damaged in any way.
- (f) If the Sega Saturn exhibits a change in performance - this indicates a need for service.

Service: Do NOT attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

Replacement Parts: When replacement parts are required, make sure the service technician has used replacement parts specified by Sega. Unauthorized substitutions may result in fire, electric shock or other hazards.

 
Safety Checks: Upon completion of any service or repairs to the Sega Saturn, ask the technician to perform safety checks to determine that the console is in proper operating condition.

Power Lines: An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching any power lines or circuits as any contact with them can be fatal.

Outdoor Antenna Grounding

When the Sega Saturn is connected to an outdoor antenna or cable system, be sure the antenna or cable system is grounded to protect against voltage surges and built up static charges. For further information, refer to Article B10 of the National Electric Code, ANSI/NFPA 70.

Example of antenna grounding as per National Electric Code (N.E.C.)



Lightning: For added protection of the Sega Saturn during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall socket and disconnect the antenna and cables. This will prevent damage from lightning and power-line surges.

CD Drive: Do not open the CD drive door when a CD is playing, as the spinning CD may cause injury.

Terminals: Do not touch the terminals or any other metallic parts. This may cause electric shock or damage the unit.

Lithium Battery: When installing the lithium battery, make sure the positive side of the lithium battery is facing upward.

Battery Replacement: When replacing the lithium battery, use only Panasonic or Sony CR2032 models.

Battery Disposal: Do not recharge, disassemble or dispose of in fire.

Battery Care: Keep the lithium battery out of the reach of children. If a child swallows a lithium battery, seek medical advice immediately. Failure to comply with this can result in a risk of suffocation or poisoning.

Disassembling the Sega Saturn: Do not disassemble or alter the Sega Saturn. The inside of the console is charged to a high voltage which may lead to electric shock, and light from the lasers in the CD drive can be harmful to the eyes if viewed directly. If the need arises to open the unit, consult your Sega Saturn dealer.